



















 




























 

 



 








 


















Original	Replacement
 Tuner	 Shift + 6
 Tape	 Shift + 5
 TV	 Shift + 1
 V-CD	 Shift + 2
 CD	 Shift + 3
 DCC	 Shift + 8
 VCR1	 Shift + 4
 VCR 2	 Shift + 7
 1	 1
 2	 2
 3	 3
 Standby	 Power
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Mono/ST	 Menu / Home
 0	 0
 Volume-	 Vol-
 Volume+	 Vol+
 Mute	 Mute / Dimmer
 FR.Direct	 D.Menu / Top
 Preset-	 I<< / Preset-
 Preset+	 >>I / Preset+
 Sleep	 Sleep / Timer
 Display	 Display / Media
 Tuning-	 << / Tune-
 Tuning+	 >> / Tune+
 Vol TV-	 Shift + Vol-
 Vol TV+	 Shift + Vol+
 Center Mode	 OK
 Center Up	 Up





Original		Replacement		Original		Replacement	
	Rear Up		Right				
	Test Tone		Text / Goto				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				

















 



























 


 








 









 

 





Original		Replacement		Original		Replacement	
	Tuner		Shift + 6		8		8
	Tape		Shift + 5		9		9
	TV		Shift + 1		Disc Down		CH- / Page-
	V-CD		Shift + 2		0		0
	CD		Shift + 3		Volume-		Vol-
	DCC		Shift + 8		Volume+		Vol+
	VCR 1		Shift + 4		Mute		Mute / Dimmer
	VCR 2		Shift + 7		Play		Play / Slow
	1		1		I<		I<< / Preset-
	2		2		>I		>>I / Preset+
	3		3		Sleep		Sleep / Timer
	Standby		Power		Stop		Stop / Hold
	4		4		Display		Display / Media
	5		5		<<		<< / Tune-
	6		6		Pause		Pause / Step / Freeze
	Disc Up		CH+ / Page+		>>		>> / Tune+
	7		7		Center Mode		OK









Original	Replacement	Original	Replacement
 Tuner	 Shift + 6	 8	 8
 Tape	 Shift + 5	 9	 9
 TV	 Shift + 1	 Disc Down	 CH- / Page-
 V-CD	 Shift + 2	 0	 0
 CD	 Shift + 3	 Volume-	 Vol-
 DCC	 Shift + 8	 Volume+	 Vol+
 VCR 1	 Shift + 4	 Mute	 Mute / Dimmer
 VCR 2	 Shift + 7	 Play	 Play / Slow
 1	 1	 I<	 I<< / Preset-
 2	 2	 >I	 >>I / Preset+
 3	 3	 Sleep	 Sleep / Timer
 Standby	 Power	 Stop	 Stop / Hold
 4	 4	 Display	 Display / Media
 5	 5	 <<	 << / Tune-
 6	 6	 Pause	 Pause / Step / Freeze
 Disc Up	 CH+ / Page+	 >>	 >> / Tune+
 7	 7	 Center Mode	 OK





Original	Replacement	Original	Replacement
 Center Up	 Up		
 Rear Up	 Right		
 Test Tone	 Text / Goto		
 Center Down	 Down		
 Rear Down	 Left		
 Delay	 Setup / OPT /		
 Dolby Pro Logic	 Sound / Title		
 3 Stereo	 Audio / Lang I/II		
 Hall	 Subtitle / EQ		
 Surr.Off	 Eject / Surround		




 



















Original	Replacement	Original	Replacement
Tuner	Shift + 6	9	9
Tape	Shift + 5	-/--	Guide / EPG / -/--
TV	Shift + 1	0	0
V-CD	Shift + 2	TXT	Text / Goto
CD	Shift + 3	Rcvr Volume-	Shift + Vol-
DCC	Shift + 8	Rcvr Volume+	Shift + Vol+
VCR1	Shift + 4	Rcvr Mute	Shift + Mute / Dimmer
VCR2	Shift + 7	TV Mute	Mute / Dimmer
1	1	Enlarge	Zoom / Size
2	2	CH Down	CH- / Page-
3	3	CH Up	CH+ / Page+
Standby	Power	Sleep	Sleep / Timer
4	4	Hold	Stop / Hold
5	5	Display	Display / Media
6	6	Page-	Shift + CH- /
7	7	Cancel	Exit / Cancel / Clear
8	8	Page+	Shift + CH+ / Page+





Original		Replacement		Original		Replacement	
	Vol TV +		Vol+				
	Vol TV -		Vol-				
	Center Mode		OK				
	Center Up		Up				
	Rear Up		Right				
	Test Tone		Shift + Text /				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				

