

 


 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Sub-T	 Subtitle / EQ	 FAV	 Fav / Marker / PC
 Lang	 Audio / Lang I / II	 Down / CH-	 Down
 Mute	 Mute / Dimmer	 Tv / Radio	 TV / Radio /
 EPG	 Guide / EPG / -/-	 1	 1
 Goto	 Shift + Goto / Text /	 2	 2
 Page+	 CH+ / Page+	 3	 3
 TTX	 Text / Goto	 Recall	 Back / Return
 Repeat	 Shift + Repeat / APP / Green /	 4	 4
 Page-	 CH- / Page-	 5	 5
 Menu	 Menu / Home	 6	 6
 Up / CH+	 Up	 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear	 7	 7
 Vol-	 Vol-	 8	 8
 Left	 Left	 9	 9
 OK	 OK	 0	 0
 Right	 Right	 <<	 << / Tune-





Original		Replacement	
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>> / Preset+
	Play		Play / Slow
	Pause/Time Shift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red/PVR		Red / Netflix / Search
	Green/V-Format		Green / APP / Repeat
	Yellow/Aspect		Yellow / YouTube / Repeat
	Blue/Timer		Blue / Prime Video / Random

Original		Replacement	

