
 





 






 












Original	Replacement
	 Power
	 AV / Input / RDS
	 Menu / Home
	 Picture / Format
	 Text / Goto
	 Subtitle / EQ
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Info / Angle
	 Exit / Cancel / Clear
	 Shift + Red / Netflix /
	 Shift + Blue / Prime / Prime
	 Up
	 Shift + Yellow / YouTube /
	 Left

Original	Replacement
	 OK
	 Right
	 Back / Return
	 Down
	 Shift + Menu /
	 Mute / Dimmer
	 Sound / Title
	 Guide / EPG / -/-
	 Shift + Smart / List
	 Vol+
	 CH+ / Page+
	 Vol-
	 Smart / List
	 CH- / Page-
	 1
	 2
	 3





Original		Replacement		Original		Replacement	
	4		4		APPS		Shift + Green / APP /
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	?/eHelp		D.Menu / Top				
	0		0				
	Last View		Fav / Marker / PC				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I		>>I / Preset+				
	Audio		Audio / Lang I/II				
	Stop		Stop / Hold				

