
















 

 
 


 



 





Original	Replacement	Original	Replacement
 Power	 Power	 Text	 Text
 TV System	 Menu	 Timeshift	 Format
 Display	 Info	 Rec	 Rec
 Audio	 Dual	 Sel Favor / Vol +	 Vol +
 Subtitle	 Subt	 Load Favor / Vol -	 Vol -
 Recall	 Pre Ch	 Source	 AV
 A-B	 Shift + Text	 Edit	 3D
 1	 1	 EPG	 Guide
 2	 2	 TV / MHR	 Shift + TV/R
 3	 3	 DTV	 TV/R
 4	 4	 Up / CH +	 Up
 5	 5	 Up / CH +	 Ch +
 6	 6	 Down / CH -	 Down
 7	 7	 Down / CH -	 Ch -
 8	 8	 Left	 Left
 9	 9	 Enter	 Ok
 0	 0	 Right	 Right





Original	Replacement	Original	Replacement
	 Back		 Shift + AV
	 Smart		 Eject
	 List		 Media
	 Play		 Shift + Media
	 Stop		 Options
	 Pause		
	 Shift + Left		
	 Shift + Right		
	 Red		
	 <<<		
	 Green		
	 >>>		
	 Yellow		
	 I<<<		
	 Blue		
	 >>>I		
	 Mute		

