 





 

 





 







 







 

 













 



























 

| Original | Replacement |
|--|---|
|  Power |  Power |
|  Sleep |  Sleep / Timer |
|  Mute |  Mute / Dimmer |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Audio/Lang |  Audio / Lang I/II |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Tv/Radio |  TV/Radio / |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Exit |  Exit / Cancel / Clear |
|  CH.List |  Smart / List |

| Original | Replacement |
|--|---|
|  0 |  0 |
|  Back |  Back / Return |
|  Menu |  Menu / Home |
|  CH- |  CH- / Page- |
|  Up |  Up |
|  CH+ |  CH+ / Page+ |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Vol- |  Vol- |
|  Down |  Down |
|  Vol+ |  Vol+ |
|  Setup |  Setup / OPT / |
|  Play/Timeshift |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Eject |  Eject / Surround |





| Original | Replacement |
|---|--|
|  Rec |  Rec / Rec Mode |
|  Text |  Text / Goto |
|  << |  << / Tune- |
|  >>/Reveal |  >> / Tune+ |
|  I<</Hold |  I<< / Preset- |
|  >>I/Sub.P |  >>I / Preset+ |
|  SUB.T |  Subtitle / EQ |
|  Index/Title |  Shift + Sound / Title |
|  Size/Zoom |  Zoom / Size |
|  D.Menu |  D.Menu / Top |
|  EPG |  Guide / EPG / -/-- |
|  FAV/Prog |  Fav / Marker / PC |
|  P.Mode/Lang |  Picture / Format |
|  S.Mode/Search |  Sound / Title |
|  Info/Display |  Info / Angle |
|  Red/Angle |  Red / Netflix / Search |
|  Green/Slow |  Green / APP / Repeat |

| Original | Replacement |
|---|---|
|  Yellow/A-B |  Yellow / YouTube / Repeat |
|  Blue/Repeat |  Blue / Prime Video / Random |

