




| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | FAV |  | Fav / Marker / PC |
|  | 0 |  | 0 |
|  | TXT |  | Text / Goto |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |

| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | CEC |  | Smart / List |
|  | ? |  | D.Menu / Top |
|  | Exit |  | Exit / Cancel / Clear |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Back |  | Back / Return |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Guide |  | Guide / EPG / -/- |
|  | Tools |  | Setup / OPT / |
|  | Vol+ |  | Vol+ |
|  | Source |  | AV / Input / RDS |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |





| Original | Replacement | Original | Replacement |
|--|---|----------|-------------|
|  PR- |  CH- / Page- | | |
|  I< |  I<< / Preset- | | |
|  >I |  >>I / Preset+ | | |
|  << |  << / Tune- | | |
|  >> |  >> / Tune+ | | |
|  Rec |  Rec / Rec Mode | | |
|  Play |  Play / Slow | | |
|  Pause |  Pause / Step / Freeze | | |
|  Stop |  Stop / Hold | | |
|  [<>] |  Picture / Format | | |
|  Dialog |  Audio / Lang I/II | | |
|  [...] |  Subtitle / EQ | | |
|  Tv/Radio |  TV/Radio / | | |
|  My Media |  Display / Media | | |
| | | | |
| | | | |
| | | | |
| | | | |

