



Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	1		Smart / List
	2		Mute / Dimmer
	2		Info / Angle
	3		Back / Return
	3		CH+ / Page+
	4		Up
	4		Vol-
	5		Left
	5		OK
	6		Right
	6		Vol+
	7		Down
	7		CH- / Page-
	8		Guide / EPG / -/--
	8		D.Menu / Top
	9		Text / Goto
	9		
	0		
	0		
	AV / Input / RDS		
	Zoom / Size		
	Subtitle / EQ		
	Audio / Lang I/II		
	Shift + Info / Angle		
	Setup / OPT /		





Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		CH+ / Page+
	8		Up
	9		Vol-
	0		Left
	AV/CL		OK
	Zoom		Right
	[...]/Subtitle		Vol+
	Audio/Language		Down
	</Camera		CH- / Page-
	?		TVG/Top Menu
			TVG/Top Menu
			TXT/Menu
			Menu / Home









 

 





















Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		CH+ / Page+
	8		Up
	9		Vol-
	0		Left
	AV/CL		OK
	Zoom		Right
	[...]/Subtitle		Vol+
	Audio/Language		Down
	◀/Camera		CH- / Page-
	?		TVG/Top Menu
			TVG/Top Menu
			TXT/Menu
			D.Menu / Top
			Text / Goto
			Text / Goto





Original	Replacement	Original	Replacement
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+




 

 
 
 






















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto





Original	Replacement	Original	Replacement
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		<< / Preset-
	>		>> / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

