 

 












 

 
 
 

 






 






 


 


 

 






 
 


Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Replacement	Original	Replacement
	TV		TV/R
	Recall		Pre Ch
	World		Media
	Menu		Menu
	Exit		Exit
	Back		Back
	i/Info		Info
	Guide		Guide
	[≡]/Text		Text
	*/O		Format
	*/O..		3D
	Lang		Dual
	[≡]..		Subt
	[-O-]		Options
	Red		Red
	Green		Green
	Yellow		Yellow





	Original	Replacement	Original	Replacement
	Blue	 D		
	Rec	 REC MODE		
	Play	 PLAY MODE		
	Stop			
	Pause			
	<<			
	>>			
	OK			
	Up			
	Down			
	Right			
	Left			
	Music/Photo/Movi	 HOME SMART		
	Q.Menu	 E-MANUAL D.MENU		

