
 
 
 
 
 
 

 
 
 

 



 






	Original	Replacement		Original	Replacement
	Power		Power		Menu
	Source		Source		
	ReSync		Help / Info		
	Video		Comp / Video		
	PC		Mode		
	HDMI		Auto		
	3D		3D / Invert		
	Up / Keystone+		Up		
	Down / Keystone-		Down		
	Aspect		Eco / Aspect		
	Right		Right		
	Left		Left		
	Menu		Menu		
	Freeze		Freeze / Timer		
	Vol+		Vol + / Page +		
	Vol-		Vol - / Page -		
	Mute		Blank / Mute		

