










 

 

 

 



 


 
 


	Original	Replacement		Original	Replacement
		Power		Power	Power
		Mute		Mute	Mute
		Pic Size		Format	Format
		Pic Mode		Shift + Format	Shift + Format
		Sleep		Sleep	Sleep
		Dual I-II		Dual	Dual
		S.Mode		Shift + Dual	Shift + Dual
		Still		Pause	Pause
		1		1	1
		2		2	2
		3		3	3
		4		4	4
		5		5	5
		6		6	6
		7		7	7
		8		8	8
		9		9	9
		0		0	0
		PRE-CH		Guide	Guide
		S.Swap		Pre Ch	Pre Ch
		PIP		I<<	I<<
		P.Input		Options	Options
		P.Position		>>	>>
		P.Size		>>I	>>I
		P.Swap		Subt	Subt
		TV		<<	<<
		PC/HDMI		TV/R	TV/R
		AV/Sel		Media	Media
		Source		Smart	Smart
		Menu		AV	AV
		Exit		Menu	Menu
		TTX/On		Exit	Exit
		Mix		Text	Text
				Shift + Text	Shift + Text





Original	Replacement
	
PR+	 Ch +
Down	
PR-	 Ch -
Right	
Vol+	 Vol +
Left	
Vol-	 Vol -
Enter	 Ok
Red	 Red
Green	 Green
Yellow	 Yellow
Blue	 Blue
Store	 +  Shift + Smart
Flof/List	 List
Hold	 Stop
Cancel	 Back

Original	Replacement
	 Info
Time	 +  Shift + AV
Size	 Eject
Reveal	 D. Menu

