


 





Original	Replacement	Original	Replacement
	Power		Power
	Dtv/Vcr		Display / Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	<<		<< / Tune-
	Up		Up
	Ch+		CH+ / Page+
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Left		Left
	Vol-		Vol-
	Ok		OK
	Right		Right
	Vol+		Vol+
	Yellow		Yellow / YouTube / Repeat
	Down		Down
	Ch-		CH- / Page-
	Blue		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Pause		Pause / Step / Freeze
	Favorite		Fav / Marker / PC
	Recall		Back / Return
	Lang		Shift + Audio / Lang I/II





Original		Replacement	Original	Replacement
	Info	 Info / Angle		
	Epg	 Guide / EPG / /--		
	Tv/Radio	 TV/Radio /		
	Audio	 Audio / Lang I/II		
	TTX	 Text / Goto		
	Subtitle	 Subtitle / EQ		

