



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	Preset+		>> / Preset+
	Preset-		<< / Preset-
	Vol+		Vol+
	Vol-		Vol-

Original	Replacement	Original	Replacement
	<< / I<<		<< / Tune-
	>> / >>		>> / Tune+
	SET		Menu / Home
	Function		D.Menu / Top
	Tone		Back / Return
	Stop/Clear		OK
	Stop Clear		Stop / Hold
	Play/Pause CD		Up
	Play/Pause CD		Play / Slow
	Play Tape		Down
	Tuner/Band		Right
	AUX		Shift + 7
	Rec Mute		Mute / Dimmer
	Rec/Rec Pause		Rec / Rec Mode
	Clock		Setup / OPT /
	Tuner Mode		Audio / Lang I/II
	Display		Display / Media





Original	Replacement	Original	Replacement
Program	TV/Radio /		
Sleep	Sleep / Timer		
Timer	Shift + Sleep / Timer		
Random/Rep	Blue / Prime Video / Random		
CD Edit/Check	AV / Input / RDS		

