









 

 



 

 

 







 

 







 

 









 

 



 

 

 



 






Original	Replacement	Original	Replacement
	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	Menu		Menu
	[i]/Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PP		Pre Ch
	-/--		Shift + Guide
	P<P		Back
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I-II		Dual
	DTV/TV		TV/R
	AV		AV
	Red/Sound/▲		Red
	Green/Picture/▼		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	[≡]/Text		Text





Original	Replacement	Original	Replacement
[≡o]	AD SUBT Subt		
[≡+]	SETTINGS OPT Options		
[≡x]/[□□]	CLEAR EXIT Exit		
[*]	HOME SMART Smart		
[+]/Wide/[≡◇]	ECO 3D 3D		
[≡?]/PC	APP MEDIA Media		
[≡i]/Guide	-/-- GUIDE Guide		
Subtitle	PROG SLEEP Sleep		
Lang	ZOOM Eject		
Screen	PICTURE FORMAT Format		
FAV	SHIFT + FAV PRE-CH Shift + Pre Ch		

