








 









 

 

















 









 

 





 





 

 






Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/M		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	TV		TV/R
	Video		AV
	L/?		Guide
	L/?		Dual
	PC		Pre Ch
	Text		Text
	F[+]		3D
	Hold/Freeze		Format
	M/S		Options





	Original	Replacement	Original	Replacement
	Mute	Mute		
	PIP	Media		
	Auto/Page	Smart		
	i	Info		
	Timer/Mix	Subt		
	F1	+  Shift + 1		
	F2	+  Shift + 2		
	F3	+  Shift + 3		
	F4	+  Shift + 4		

