



Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Red/PVR		Red
	6		6		Green		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		EPG		Guide
	0/FAV		0		TXT		Text
	AV		AV		Option		Options
	Mute		Mute		<<		<<
	List		List		Play		Play
	Exit		Exit		>>		>>
	i		Info		Skip R		I<<
	Swap		Pre Ch		Pause/Timeshift		Pause





Original	Replacement	Original	Replacement
 SKIP F	 >>I		
 REC	 REC		
 LIVE	 Stop		
 TIMER	 +  Shift + AV		
 FILES	 Subt		
 TV	 TV/R		
 RADIO	 Dual		
 FORMAT	 Format		
 MENU	 Menu		

