

 









 


 


 




 

 



 

 

 


 







 
 






 



 



 
 
 


 





Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Down	 Down
Update	 Smart	Back	 Back
Reveal	 Media	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Subt.List	 Subt	Chan.Down	 Ch -
Sleep Timer	 Sleep	1	 1
Return TV	 TV/R	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Display	 Shift + Info	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide


 
 


 







Original	Replacement	Original	Replacement
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Smart	Menu Off	 Exit
Reveal	 Media	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
2.Fav P/C 2.		Pre Ch	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Tune-		<<	
Tune+		>>	

