



Original	Replacement	Original	Replacement
	Power		Power
	Play/Pause/Auto		Play / Slow
	Stop		Stop / Hold
	REM		Setup / OPT /
	I<</Tun-		I<< / Preset-
	>>/Tun+		>>/ Preset+
	EQ		Subtitle / EQ
	CH-		CH- / Page-
	CH+		CH+ / Page+
	1		1
	2		2
	3		3
	4		4
	5+		5
	0		0
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	RAN		Text / Goto
	Repeat		Green / APP / Repeat
	FUNC.		Menu / Home

