

 
 

 

 

















 


 

 









 

 





 


 
 




Original	Replacement	Original	Replacement
 Standby	 Power	 OK	 OK
 Info	 Info / Angle	 Right	 Right
 CC	 Subtitle / EQ	 Vol+	 Vol+
 Mute	 Mute / Dimmer	 Record	 Rec / Rec Mode
 I<	 I<< / Preset-	 CH-	 CH- / Page-
 Play	 Play / Slow	 Down	 Down
 Pause	 Pause / Step / Freeze	 Timeshift	 D.Menu / Top
 <<	 << / Tune-	 1	 1
 >	 >> / Preset+	 2	 2
 Stop	 Stop / Hold	 3	 3
 >>	 >> / Tune+	 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home	 4	 4
 CH+	 CH+ / Page+	 5	 5
 Up	 Up	 6	 6
 Exit	 Exit / Cancel / Clear	 Back	 Back / Return
 Left	 Left	 7	 7
 Vol-	 Vol-	 8	 8





































	Original	Replacement		Original	Replacement
	9	 9			
	0	 0			
	Media	 Display / Media			
	USB	 Shift + 8			
	Tv/Radio	 TV/Radio /			
	Audio	 Audio / Lang I/II			
	List	 Smart / List			
	Timer	 Sleep / Timer			
	FAV	 Fav / Marker / PC			
	TTX	 Text / Goto			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			





Original	Replacement
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Audio	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
Timer	 Sleep / Timer
Tv/Radio	 TV/Radio /
Res	 D.Menu / Top
TTX	 Text / Goto
Menu	 Menu / Home

Original	Replacement
Up	 Up
Info	 Info / Angle
Left	 Left
OK	 OK
Right	 Right
Exit	 Exit / Cancel / Clear
Down	 Down
Back	 Back / Return
Vol+	 Vol+
Nothing	 Smart / List
CH+	 CH+ / Page+
Vol-	 Vol-
Media	 Display / Media
CH-	 CH- / Page-
1	 1
2	 2
3	 3





Original	Replacement	Original	Replacement
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
FAV	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
USB	+ Shift + 8		

