









 














 







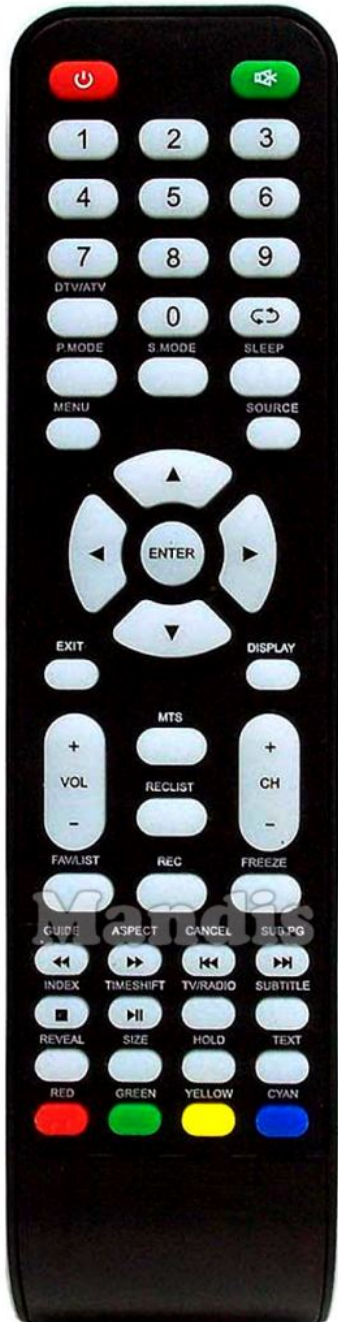




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode














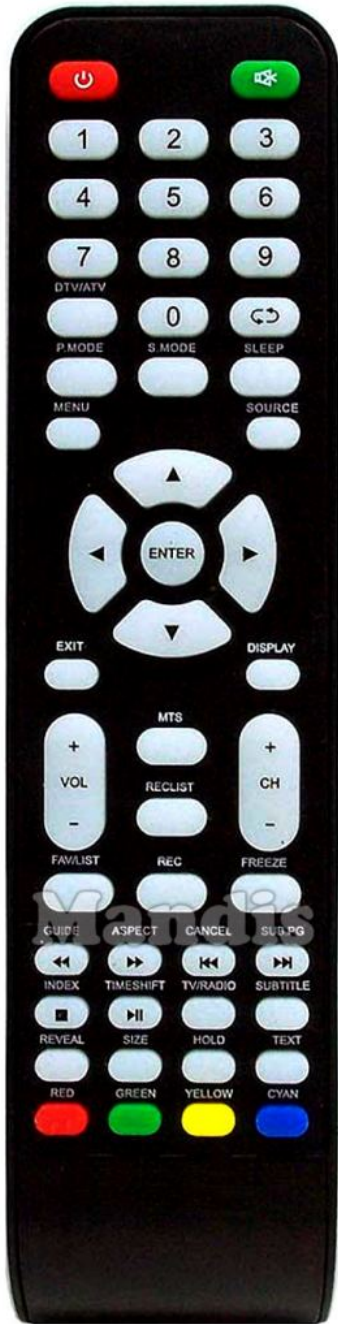





















Original	Replacement
	Freeze
	Guide / EPG / -/-
	<< / Tune-
	>> / Tune+
	Shift + Picture / Format
	<< / Preset-
	Shift + Exit / Cancel / Clear
	>>  / Preset+
	Stop / Hold
	Play / Slow
	TV/Radio /
	Subtitle / EQ
	Eject / Surround
	Zoom / Size
	Shift + Stop /
	Text / Goto
	Red / Netflix / Search





















Original	Replacement
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Replacement
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode





	Original	Replacement		Original	Replacement
	Freeze	Pause / Step / Freeze		Green	Green / APP / Repeat
	Guide	Guide / EPG / --		Yellow	Yellow / YouTube / Repeat
	<<	<< / Tune-		Cyan	Blue / Prime Video / Random
	>> / Aspect	>> / Tune+			
	>> / Aspect	Shift + Picture / Format			
	<< / Cancel	<< / Preset-			
	<< / Cancel	Shift + Exit / Cancel / Clear			
	>>  / Sub.PG	>>  / Preset+			
	Stop / Index	Stop / Hold			
	Play/Pause / Timeshift	Play / Slow			
	Tv/Radio	TV/Radio /			
	Subtitle	Subtitle / EQ			
	Reveal	Eject / Surround			
	Size	Zoom / Size			
	Hold	Shift + Stop /			
	Text	Text / Goto			
	Red	Red / Netflix / Search			

