 

 



 

 



 

 

 

 

 



 

 

 

 





 

 

 

 

 

 
 
 
 
 

 











 

 





 

 

 
 
 

 



 

 

 







 

 





 



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	PMode		Picture / Format
	SMode		Sound / Title
	I/II/Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Fav / Marker / PC
	Recall		Back / Return
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Auto		Setup / OPT /
	Display		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto
	 Shift + Stop /
	 Shift + Green / APP /
	 Subtitle / EQ
	 Info / Angle
	 Zoom / Size
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 Rec / Rec Mode
	 D.Menu / Top
	 Eject / Surround

Original	Replacement
	 TV/Radio /

