










Original	Replacement	Original	Replacement
 Power	 Power	 FAV	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 1	 1	 Up / CH+	 Up
 2	 2	 Up / CH+	 CH+ / Page+
 3	 3	 Down / CH-	 Down
 4	 4	 Down / CH-	 CH- / Page-
 5	 5	 Left / Vol-	 Left
 6	 6	 Left / Vol-	 Vol-
 7	 7	 OK	 OK
 8	 8	 Right / Vol+	 Right
 9	 9	 Right / Vol+	 Vol+
 0	 0	 Red / Audio	 Red / Netflix / Search
 TV/R	 TV/Radio /	 Red / Audio	 Audio / Lang I/II
 SAT	 Shift + 0	 Green / Mode	 Green / APP / Repeat
 SAT	 Smart / List	 Yellow / Disp	 Yellow / YouTube / Repeat
 EPG	 Guide / EPG / -/--	 Yellow / Disp	 Display / Media
 Menu	 Menu / Home	 Blue	 Blue / Prime Video / Random





Original	Replacement
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /
 Recall	 Back / Return
 F1 /Info	 Info / Angle
 F1 /Info	 Shift + 1
 F2 / SUB	 Subtitle / EQ
 F2 / SUB	 Shift + 2
 F3 / Goto	 Shift + Text /
 F3 / Goto	 Shift + 3
 TXT	 Text / Goto
	
	
	
	
	
	
	

Original	Replacement
	 Shift + 8
	 Pause / Step / Freeze
	 Rec / Rec Mode

