 





 





 






 
 






 














	Original	Replacement		Original	Replacement
	 Power	 Power		 Shift + Guide	 Shift + Guide
	 Mute	 Mute		 Back	 Back
	 Auto	 Smart		 Menu	 Menu
	 P.Mode	 Format		 Exit	 Exit
	 S.Mode	 Shift + Dual		 Guide	 Guide
	 Display	 Info		 AV	 AV
	 Audio/Nicam	 Dual		 Up	 Up
	 1	 1		 Down	 Down
	 2	 2		 Right	 Right
	 3	 3		 Left	 Left
	 4	 4		 Enter	 Enter
	 5	 5		 CH +	 Ch +
	 6	 6		 CH -	 Ch -
	 7	 7		 Vol +	 Vol +
	 8	 8		 Vol -	 Vol -
	 9	 9		 Text	 Text
	 0	 0		 <<	 <<





	Original	Replacement	Original	Replacement
	>>/Hold	 >>	 Media	 Media
	I<</Index	 I<<	 Nothing	 3D
	>>I/Size	 >>I		
	Play	 Play		
	Pause	 Pause		
	Stop/Subpage	 Stop		
	Zoom/Reveal	 Eject		
	Sleep	 Sleep		
	Tv/Radio	 TV/R		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		
	FAV	 Pre Ch		
	Repeat/FAV-	 Shift + Ch -		
	FAV+	 Shift + Ch +		
	Subtitle	 Subt		

