






 

 


 

 
 

 
 
 

 

 

 
 



 



 
 
 

 
 
 

 

 

 
 
 
 
 
 


 
 

 
 
 


 
 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Back
 DTV	 Smart	 EPG	 Guide
 ATV	 Media	 FAV	 Pre Ch
 FAV List	 Shift + Pre Ch	 Sound	 Dual
 CH List	 List	 Stereo	 Shift + Dual
 TV / Radio	 TV/R	 Picture	 Shift + Format
 Aspect	 Format	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 2	 2	 CH +	 Ch +
 3	 3	 CH -	 Ch -
 4	 4	 Mute	 Mute
 5	 5	 Sleep	 Sleep
 6	 6	 Input	 AV
 7	 7	 Menu	 Menu
 8	 8	 Up	 Up
 9	 9	 Right	 Right
 0	 0	 Down	 Down





Original	Replacement	Original	Replacement
	 Left		 Shift + Text
	 Ok		 3D
	 Info		 Shift + Stop
	 Exit		 Subt
	 Play		 Shift + Subt
	 Pause		 Shift + AV
	 Stop		 Shift + Sleep
	 Rec		
	 Red		
	 <<<		
	 Green		
	 >>>		
	 Yellow		
	 I<<<		
	 Blue		
	 >>>I		
	 Text		

