










 
 



 



 
 

 

 

 

 



 



 



 



 



 












 

 
 






Original	Replacement	Original	Replacement
 Standby	 Power	 7	 7
 Mute	 Mute	 8	 8
 Aspect	 Format	 9	 9
 P.Mode	 Shift + Format	 0	 0
 S.Mode	 Shift + Dual	 +/-	 Shift + Guide
 Nicam/Audio	 Dual	 Recall	 Back
 Sleep	 Sleep	 Source	 AV
 FAV List	 Pre Ch	 Menu	 Menu
 EPG	 Guide	 Up	 Up
 Rec	 Rec	 Left	 Left
 PVR.Menu	 D. Menu	 Enter	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Exit	 Exit
 6	 6	 Display	 Info





Original	Replacement
CH+	Ch +
CH-	Ch -
	Red
	Yellow
	Blue
	Green
	Text
	Smart
	Subt
	Shift + Left
	Shift + Text
	List
	Eject
	Shift + Exit
	Play
	Pause
	Stop

Original	Replacement
Tv/Radio	TV/R
	Media

