

























 




 












 







 



















Original	Replacement	Original	Replacement
 Standby	 Power	 Favorite	 Fav / Marker / PC
 DTV/VCR	 Smart / List	 1	 1
 Mute	 Mute / Dimmer	 2	 2
 Menu	 Menu / Home	 3	 3
 Info	 Info / Angle	 4	 4
 EPG	 Guide / EPG / -/--	 5	 5
 Pause	 Pause / Step / Freeze	 6	 6
 Exit	 Exit / Cancel / Clear	 7	 7
 Up	 Up	 8	 8
 CH+ / Page+	 CH+ / Page+	 9	 9
 CH- / Page-	 CH- / Page-	 0	 0
 Down	 Down	 Game	 Display / Media
 Right	 Right	 Recall	 Back / Return
 Vol+	 Vol+	 Tv/Radio	 TV/Radio /
 Left	 Left	 Audio	 Audio / Lang I/II
 Vol-	 Vol-	 Subtitle	 Subtitle / EQ
 OK	 OK	 Text	 Text / Goto





Original	Replacement	Original	Replacement
	Red  Red / Netflix / Search		
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		

