





















 














 
 











	Original	Replacement		Original	Replacement
	Power		Power		 Picture / Format
	Mode		Smart / List		 Audio / Lang I/II
	Rotate		Green / APP / Repeat		 TV/Radio /
	Setup		Setup / OPT /		 Vol-
	Up		Up		 Mute / Dimmer
	Zoom		Zoom / Size		 Vol+
	Left		Left		
	Enter		OK		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	Right		Right		
	Timer		Sleep / Timer		
	Down		Down		
	Back		Back / Return		
	I<<		I<< / Preset-		
	[O]		Subtitle / EQ		
	>>I		>>I / Preset+		

