



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Tv/Radio		TV/Radio /
	4		4
	5		5
	6		6
	↑		CH+ / Page+
	7		7
	8		8
	9		9
	↓		CH- / Page-
	0		0
	←PR		Back / Return
	PAL/NTSC		Picture / Format

Original	Replacement	Original	Replacement
	Pause		Pause / Step / Freeze
	EPG		Guide / EPG / -/-
	Up/PR+		Up
	Menu		Menu / Home
	Left		Left
	Vol-		Vol-
	OK/List		OK
	Right		Right
	Vol+		Vol+
	Info		Info / Angle
	Down/PR-		Down
	Exit		Exit / Cancel / Clear
	[+]		Zoom / Size
	FAV		Fav / Marker / PC
	Record		Rec / Rec Mode
	Stop		Stop / Hold
	Audio		Audio / Lang I/II





	Original	Replacement		Original	Replacement
	TXT	 Text / Goto			
	Subtitle	 Subtitle / EQ			
	Audio L/R	 Sound / Title			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			

