







 



 









 



















 

















 











| Original | Replacement |
|--|---|
|  PP |  Back / Return |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  P<P |  Fav / Marker / PC |
|  0 |  0 |
|  -- |  Guide / EPG / -- |
|  Menu [M] |  Menu / Home |
|  Info [i] |  Info / Angle |
|  I-II |  Audio / Lang I/II |

| Original | Replacement |
|--|---|
|  Mute |  Mute / Dimmer |
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  OK |  OK |
|  Down |  Down |
|  V - |  Vol- |
|  V + |  Vol+ |
|  P - |  CH- / Page- |
|  P + |  CH+ / Page+ |
|  Red / Sound |  Red / Netflix / Search |
|  Red / Sound |  Sound / Title |
|  Green / Picture |  Green / APP / Repeat |
|  Green / Picture |  Picture / Format |
|  Yellow / Feature |  Yellow / YouTube / Repeat |
|  Blue / Install |  Blue / Prime Video / Random |
|  Text |  Text / Goto |





| | Original | Replacement | | Original | Replacement |
|--|-----------------|--|--|----------|-------------|
| | [≡o] | TIMER SLEEP Sleep / Timer | | | |
| | Hold | HOLD Stop / Hold | | | |
| | [≡X] | CLEAR EXIT CANCEL Exit / Cancel / Clear | | | |
| | Mix / PIP Swap | LIST SMART Smart / List | | | |
| | PIP / Size | SIZE ZOOM Zoom / Size | | | |
| | PIP Down / [≡?] | PRESET- I<< / Preset- | | | |
| | PIP Up / Index | PRESET+ >>I / Preset+ | | | |
| | [TV] | PROGRAM TV/RADIO TV/Radio / | | | |
| | [AV] | RDS AV INPUT AV / Input / RDS | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

