



| Original | Replacement | Original | Replacement |
|----------------|--------------------------|----------|-----------------------|
| Standby | Shift + Mute / Dimmer | Info | Info / Angle |
| Mute | Mute / Dimmer | Left | Left |
| ATV | Shift + AV / Input / RDS | OK | OK |
| TV / Radio | TV/Radio / | Right | Right |
| TV Guide | Guide / EPG / -/-- | Menu | Menu / Home |
| USB | Shift + 8 | Down | Down |
| S. Mode | Sound / Title | Exit | Exit / Cancel / Clear |
| USB I<<< | I<<< / Preset- | 1 | 1 |
| USB >>> | >>> / Preset+ | 2 | 2 |
| USB Stop | Stop / Hold | 3 | 3 |
| P. Mode | Picture / Format | 4 | 4 |
| USB <<< | <<< / Tune- | 5 | 5 |
| USB >>> | >>> / Tune+ | 6 | 6 |
| USB Play/Pause | Shift + Play / | 7 | 7 |
| USB Play/Pause | Play / Slow | 8 | 8 |
| AV Source | AV / Input / RDS | 9 | 9 |
| Up | Up | 0 | 0 |



