


Original	Replacement	Original	Replacement
	Recall		Pre Ch
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Menu		Menu
	P.Mode		Format
	Zoom		Eject
	Exit		Exit

Original	Replacement	Original	Replacement
	Up / P +		Up
	Up / P +		Ch +
	Down / P -		Down
	Down / P -		Ch -
	Right / V +		Right
	Right / V +		Vol +
	Left / V -		Left
	Left / V -		Vol -
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Still		Pause
	Display		Info
	Sleep		Sleep
	Mute		Mute



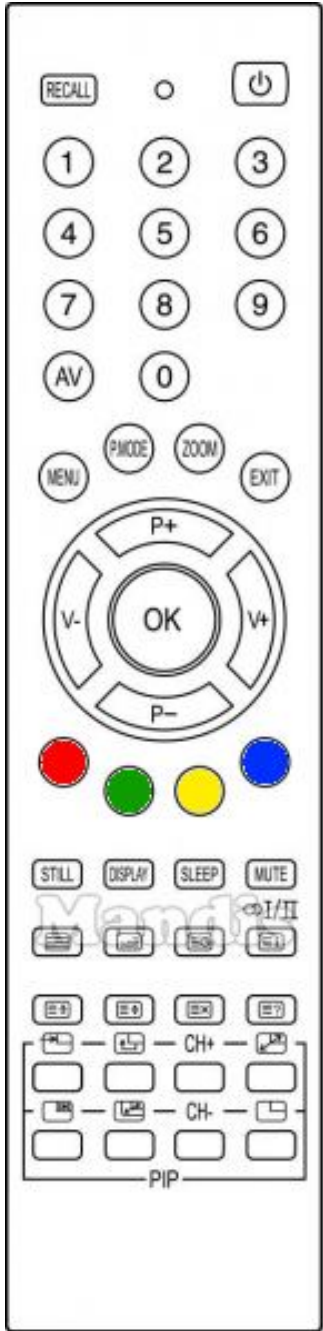

Original	Replacement	Original	Replacement
[≡]	REPEAT TEXT		Text
[/≡]	SHIFT + REPEAT TEXT		Shift + Text
[≡i] / I/II	SOUND DUAL		Dual
[≡□]	STOP		Stop
[≡◆]	SHIFT + ZOOM		Shift + Eject
[≡X]	SHIFT + CLEAR EXIT		Shift + Exit
[≡?]	E-MANUAL D.MENU		D. Menu
PIP Sel	HOME SMART		Smart
PIP	APP MEDIA		Media
PIP to Main	SHIFT + OK		Shift + Ok
PIP CH +	SHIFT + + CH		Shift + Ch +
PIP CH -	SHIFT + - CH		Shift + Ch -
PIP Swap	RETURN BACK		Back
PIP Hold	SHIFT + STOP		Shift + Stop
PIP Size	SHIFT + HOME SMART		Shift + Smart

Original	Replacement	Original	Replacement

