










































 













 














Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	AV/TV		AV / Input / RDS
	Menu		Menu / Home
	TXT		Text / Goto
	Swap		Back / Return
	16:9		Picture / Format
	Up		Up
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Down		Down
	Right		Right
	Vol-		Vol-
	Vol+		Vol+
	Left		Left
	OK		OK
	i		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Timer		Yellow / YouTube / Repeat
	Blue/→ ←		Blue / Prime Video / Random
	Stop		Stop / Hold
	Reveal		TV/Radio /



