


 
 
 

 




 
 

 

 

 









 



 
 
 


 






 



 



 










 








 

 


 


 

 
 
 





 

 





 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause
 Mute	 MUTE	 Play	 Play
 Screen	 WIDE	 Stop	 Stop
 Tv / AV	 SRC	 Rec	 Rec
 1	 1	 Up	 UP
 2	 2	 Down	 DOWN
 3	 3	 Right	 RIGHT
 4	 4	 Left	 LEFT
 5	 5	 CH+	 CH +
 6	 6	 CH-	 CH -
 7	 7	 Vol+	 VOL +
 8	 8	 Vol-	 VOL -
 9	 9	 OK	 OK
 0	 0	 Tv-Menu	 MENU
 -/--	 -/-- / EPG	 Exit	 EXIT
 Return	 BACK	 Info	 INFO
 Open / Close	 VOD	 Subtitle	 Subt.





Original		Replacement		Original		Replacement	
	Picture / Lan		OPT+		Blue / A-B		Blue (D)
	Sound / Zoom		Audio				
	Nicam/A2 / Sub		MEDIA				
	Sleep / Goto		Shift + VOD				
	EPG / Set		Shift + - / - / EPG				
	Menu / FAV		P/C / FAV				
	ANG / Channel		Shift + MEDIA				
	Title / Tv/Radio		TV/R				
	<<		Rewind				
	Text		TEXT				
	>> / Hold		Fast Forward				
	I<<		First				
	Size		V-FOR				
	>>I / Index		Last				
	Red / Pro		Red (A)				
	Green / Slow / Device		Green (B)				
	Yellow / Rep / Timer		Yellow (C)				

