



Original	Replacement	Original	Replacement
Power	Power	CH-	CH- / Page-
DTV/VCR	AV / Input / RDS	Down	Down
Mute	Mute / Dimmer	Favorite	Fav / Marker / PC
Info	Info / Angle	1	1
Play	Play / Slow	2	2
Pause	Pause / Step / Freeze	3	3
Menu	Menu / Home	Game	Display / Media
EPG	Guide / EPG / -/--	4	4
Exit	Exit / Cancel / Clear	5	5
Up	Up	6	6
CH+	CH+ / Page+	Recall	Back / Return
Left	Left	7	7
Vol-	Vol-	8	8
OK	OK	9	9
Right	Right	0	0
Vol+	Vol+	Tv/Radio	TV/Radio /
Rec List	Smart / List	Audio	Audio / Lang I/II

Original	Replacement	Original	Replacement
Power	Power	CH-	CH- / Page-
DTV/VCR	AV / Input / RDS	Down	Down
Mute	Mute / Dimmer	Favorite	Fav / Marker / PC
Info	Info / Angle	1	1
Play	Play / Slow	2	2
Pause	Pause / Step / Freeze	3	3
Menu	Menu / Home	Game	Display / Media
EPG	Guide / EPG / -/--	4	4
Exit	Exit / Cancel / Clear	5	5
Up	Up	6	6
CH+	CH+ / Page+	Recall	Back / Return
Left	Left	7	7
Vol-	Vol-	8	8
OK	OK	9	9
Right	Right	0	0
Vol+	Vol+	Tv/Radio	TV/Radio /
Rec List	Smart / List	Audio	Audio / Lang I/II





Original	Replacement	Original	Replacement
 Subtitle	 Subtitle / EQ		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Record	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 >>	 >> / Tune+		

Original	Replacement	Original	Replacement

