


 
 
 

 
 



 
 


 

 
 
 
 

 
 
 

 
 



 
 


 



 

 
 


 






 





 



 
 

 

 





Original		Replacement		Original		Replacement	
	Standby		Power		8		8
	Open / Close		Eject		9		9
	OSD		Blue		0		0
	Subtitle		Subt		10+		Guide
	Angle		Yellow		Goto		Pre Ch
	Language		Dual		Step		Ch +
	L / R		Red		Slow		Ch -
	N / P		Green		PBC		Media
	Video Mode		Format		Repeat		Text
	Video		AV		Program		Sleep
	1		1		A-B		Shift + Dual
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Setup		Options
	5		5		Setup		Menu
	6		6		Zoom		Shift + Eject
	7		7		Up		Up





Original		Replacement		Original	Replacement
	Down		Down		
	Right		Right		
	Left		Left		
	Enter		Ok		
	Title		TV/R		
	Root		Info		
	Return		Back		
	Return		Exit		
	3D		3D		
	Mute		Mute		
	Pause		Pause		
	Play		Play		
	Stop		Stop		
	<< FR		<<		
	>> FF		>>		
	I<< Prev		I<<		
	>>I Next		>>I		

