



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<</[≡o]		<< / Tune-
	>>/[≡?]		>> / Tune+
	I<</[≡+]		I<< / Preset-
	>>I/[≡..]		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[≡i]		Smart / List
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Freeze		Shift + Pause / Step / Freeze
	Info		Info / Angle
	[]/Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	FAV		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	REP/Rec		Rec / Rec Mode
	CH-		CH- / Page-
	1		1













Original	Replacement
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
AUDIO	LANG I/II AUDIO Audio / Lang I/II
0	HDMI - BAT 0
RECALL	RETURN BACK Back / Return

Original	Replacement


















 





Original	Replacement	Original	Replacement
Power	 Power		
Mute	 Mute / Dimmer		
Play	 Play / Slow		
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		
<</Hold	 << / Tune-		
>>/Index	 >> / Tune+		
I<<	 I<< / Preset-		
>>I	 >>I / Preset+		
Nicam/A2	 Audio / Lang I/II		
Subtitle	 Subtitle / EQ		
Subpage	 Eject / Surround		
Size	 Zoom / Size		
Sleep	 Sleep / Timer		
DTV/Radio	 TV/Radio /		
Reveal	 D.Menu / Top		

Original	Replacement	Original	Replacement
TXT/MIX	 Text / Goto		
Menu	 Menu / Home		
Up	 Up		
Info	 Info / Angle		
Left	 Left		
Enter	 OK		
Right	 Right		
Cancel	 Exit / Cancel / Clear		
Down	 Down		
Back	 Back / Return		
Vol+	 Vol+		
List	 Smart / List		
CH+	 CH+ / Page+		
Vol-	 Vol-		
Mode	 Display / Media		
CH-	 CH- / Page-		
1	 1		





















 


















Original	Replacement	Original	Replacement
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
EPG	 Guide / EPG / -/--		
0		0	0
FAV	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
<</Hold	 Shift + Stop /		
FAV-	 Shift + Left		

Original	Replacement	Original	Replacement
FAV+	 Shift + Right		
-/--	 Shift + Guide / EPG / -/--		


















Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Replacement	Original	Replacement
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Replacement	Original	Replacement
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift + Pause / Step /		

