 

 

 

 
 

 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right/Zoom+		Right
	Left/Zoom-		Left
	Red/[o]		Red
	Green/Timer/List		Green
	Yellow		Yellow
	Blue/[]		Blue
	Info		Info
	Text		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/-/--		0
	AV		AV
	SP/LP		Media
	Play		Play
	>>		>>








 
 

 
 

 
 


 

 


 

 
 

 

 
 

 
 

 



 


 
 





 



 
 
 
 
 

 
 









Original	Replacement	Original	Replacement
	<<		<<
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Mark		3D
	0000		Guide





Original	Replacement	Original	Replacement
 Power	 Power	 Blue/[]	 Blue
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 Text	 Text
 Mute	 Mute	 Play	 Play
 PR+	 Ch +	 Stop	 Stop
 PR-	 Ch -	 Rec	 Rec
 Exit	 Exit	 Pause	 Pause
 Menu	 Menu	 >>	 >>
 Back	 Back	 <<	 <<
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right/Zoom+	 Right	 3	 3
 Left/Zoom-	 Left	 4	 4
 OK	 Ok	 5	 5
 Red/[o]	 Red	 6	 6
 Green/Timer/List	 Green	 7	 7
 Yellow	 Yellow	 8	 8





Original		Replacement		Original		Replacement	
	9		9				
	AV		AV				
	SP/LP		Media				





Original	Replacement	Original	Replacement
	Power		Blue/[]
	Vol +		Info
	Vol -		Text
	Mute		1
	Ch +		2
	Ch -		3
	Menu		4
	Exit		5
	Back		6
	Up		7
	Down		8
	Right		9
	Left		0
	Ok		AV
	Red		Media
	Green		Play
	Yellow		Stop





Original		Replacement		Original		Replacement	
	>>		>>				
	<<		<<				
	Rec		Rec				
	Pause		Pause				
	Mark		3D				
	0000		Guide				

