



 
 
















 






 



 
 


 



 


 





 
 
 

 



 
 
 
 





Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Tv/Radio	 TV/R	 Left	 Left
 Play	 Play	 OK	 Ok
 Pause	 Pause	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 <<	 <<	 Mute	 Mute
 >>	 >>	 i	 Info
 Rec	 Rec	 P+	 Ch +
 Media	 Media	 P-	 Ch -
 Lang.	 Dual	 Red / PVR	 Red
 SUB	 Subt	 Green	 Green
 Guide	 Guide	 Yellow/Timer	 Yellow
 Menu	 Menu	 Blue	 Blue
 FAV.	 Pre Ch	 1	 1
 X/Exit	 Exit	 2	 2
 Up	 Up	 3	 3
 Down	 Down	 4	 4





Original		Replacement		Original		Replacement	
5 jkl	5	5	5				
6 mno	6	6	6				
7 pqrs	7	7	7				
8 tuv	8	8	8				
9 wxyz	9	9	9				
0 & .	0	0	0				
TTX	TTX	REPEAT TEXT	Text				
CH	CH Back	RETURN BACK	Back				

