



 
 





 



Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv Portal		D.Menu / Top
	0		0
	Menu		Menu / Home
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Replacement
 Back	 Back / Return
 Vol+	 Vol+
 List	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-
 i	 Info / Angle
 P-	 CH- / Page-
 OPT+	 Setup / OPT /
 Audio	 Audio / Lang I/II
 Sub	 Subtitle / EQ
 Tv/Radio	 TV/Radio /
 Text	 Text / Goto
 [+ ≡]	 Shift + Fav / Marker / PC
 [≡ ≡]	 Fav / Marker / PC
  >	 Shift + Play /
 Source	 AV / Input / RDS
 Sleep	 Sleep / Timer

Original	Replacement
 V-Format	 Picture / Format
 Wide	 Zoom / Size

