



Original	Replacement
Vol+	Vol+
Menu	Menu / Home
P+	CH+ / Page+
Vol-	Vol-
Silence	Mute / Dimmer
P-	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Retour	Back / Return
Pilote	Guide / EPG / -/--
Sortie	Exit / Cancel / Clear
1	1
2	2
3	3

Original	Replacement
4	4
5	5
6	6
7	7
8	8
9	9
TV/TNT	TV/Radio /
0	0
Marche/Arret	Power

