

 

 


 




 
 
 

 
 






 

 
 
 

 



 

 

 
 
 
 


 
 
 
 
 


 
 

 





 



 
 

 




Original	Replacement	Original	Replacement
 Standby	 Power	 Aspect	 Format
 Mute	 Mute	 Info / Display	 Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Menu	 Menu
 9	 9	 Source	 AV
 0	 0	 Exit	 Exit
 -/--	 Shift + Guide	 Freeze	 Pause
 Recall	 Back	 P.Mode	 Shift + Format
 Vol+	 Vol +	 S.Mode	 Shift + Dual
 Vol-	 Vol -	 FAV	 Pre Ch
 Sleep	 Sleep	 EPG	 Guide





	Original		Replacement
	Subtitle		Subt
	TV / Radio		TV/R
	Audio I / II		Dual
	Text		Text
	Index		Smart
	Mix		Shift + Text
	Reveal		Media
	Size		Eject
	Subpage		Shift + Subt
	Hold		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

	Original		Replacement

