



Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Replacement	Original	Replacement
Blue/Pause	Blue / Prime Video / Random		
Blue/Pause	Pause / Step / Freeze		
Text/[≡]	Text / Goto		
T.OPT/←←	←← / Preset-		
T.OPT/←←	Setup / OPT /		
T.OPT/←←	←← / Tune-		
Subtitle/→→	→→ / Preset+		
Subtitle/→→	Subtitle / EQ		
Subtitle/→→	→→ / Tune+		
Simplink	Sleep / Timer		
Q.Menu	D.Menu / Top		
Info	Info / Angle		
Guide	Guide / EPG / -/--		
FAV/Mark	Fav / Marker / PC		

Original	Replacement	Original	Replacement

