

 

 

 

 



 



 



 










 
 





Original	Replacement	Original	Replacement
	Power		Vol +
	Mute		MTS
	1		CH +
	2		Vol -
	3		Aspect
	4		CH -
	5		Guide
	6		Home
	7		Rec
	8		Menu
	9		Up
	List		Source
	0		Left
	Recall		Enter
	P.Mode		Right
	S.Mode		Exit
	Sleep		Down





Original	Replacement
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Index	<< / Tune-
Play/Pause /	Pause / Step / Freeze
Play/Pause /	Shift + Exit / Cancel / Clear
Play/Pause /	Play / Slow
>> / TTX	>> / Tune+
>> / TTX	Text / Goto
I<< / SUB.PG	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Mix	Stop / Hold
CAP	D.Menu / Top
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /

Original	Replacement
FAV	Fav / Marker / PC
Size / Mouse	Zoom / Size
Hold / Refresh	Shift + Stop /

