 















 



 
 



 
 

 
 






 



 



 



 



 


 
 



 











| Original | Replacement | Original | Replacement |
|---|---|--|---|
|  Power |  Power |  Tv Guide |  Guide / EPG / -/-- |
|  Mute |  Mute / Dimmer |  0 |  0 |
|  DTV |  Shift + 1 |  Recall |  Back / Return |
|  DTV |  TV/Radio / |  Vol+ |  Vol+ |
|  Radio |  Shift + TV/Radio / Program |  P.Mode |  Picture / Format |
|  Radio |  Shift + 6 |  CH+ |  CH+ / Page+ |
|  USB |  Shift + 8 |  S.Mode |  Sound / Title |
|  DVD |  Shift + 2 |  Vol- |  Vol- |
|  1 |  1 |  FAV |  Fav / Marker / PC |
|  2 |  2 |  CH- |  CH- / Page- |
|  3 |  3 |  Menu |  Menu / Home |
|  4 |  4 |  Up |  Up |
|  5 |  5 |  Exit |  Exit / Cancel / Clear |
|  6 |  6 |  Left |  Left |
|  7 |  7 |  OK |  OK |
|  8 |  8 |  Right |  Right |
|  9 |  9 |  Source |  AV / Input / RDS |





| Original | Replacement | Original | Replacement |
|---|-----------------|---|-----------------------------|
|  | Down |  | Down |
|  | Info |  | Info / Angle |
|  | Aspect |  | Shift + Picture / Format |
|  | Sleep |  | Sleep / Timer |
|  | Audio |  | Audio / Lang I/II |
|  | Subtitle |  | Subtitle / EQ |
|  | Text |  | Text / Goto |
|  | Text Hold |  | Shift + Stop / |
|  | Zoom/Text/DVD |  | Zoom / Size |
|  | Power/Display |  | Display / Media |
|  | Power/Display |  | Shift + Power |
|  | DVD Menu |  | D.Menu / Top |
|  | Rec |  | Rec / Rec Mode |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | Stop/Eject |  | Stop / Hold |
|  | Stop/Eject |  | Eject / Surround |
|  | Rec List/DVD |  | Setup / OPT / |
|  | Rec List/DVD |  | Smart / List |
|  | << PVR/DVD |  | << / Tune- |
|  | >> PVR/DVD |  | >> / Tune+ |
|  | Pause |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Red/Goto |  | Shift + Text / |
|  | Red/Goto |  | Red / Netflix / Search |
|  | Green/A-B |  | Green / APP / Repeat |
|  | Green/A-B |  | Shift + Yellow / YouTube / |
|  | Yellow/Angle/3D |  | Yellow / YouTube / Repeat |
|  | Yellow/Angle/3D |  | Shift + Info / Angle |
|  | Blue/Repeat |  | Blue / Prime Video / Random |
|  | Blue/Repeat |  | Shift + Green / APP / |

