



Original	Replacement
 Standby	 Power
 Auto / Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 Back	 Back / Return
 Vol+	 Vol+
 Title	 Shift + Sound / Sound / Title
 Menu	 D.Menu / Top

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 LCD Menu	 Menu / Home
 Down	 Down
 DVD Setup / Exit	 Setup / OPT /
 DVD Setup / Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow




 
























 

 

 

 









Original	Replacement
Stop	Stop / Hold
Slow / Step	Shift + Play /
Slow / Step	Shift + Pause / Step /
Audio / Nicam	Audio / Lang I/II
Text / <<	Text / Goto
Text / <<	<< / Tune-
>> / Mix	>> / Tune+
Hold / Goto	Shift + Text /
Hold / Goto	Shift + Stop /
Subpage /	Info / Angle
I<< / Index	I<< / Preset-
>>I / Size	Shift + Zoom /
>>I / Size	>>I / Preset+
Reveal / Zoom	Zoom / Size
Picture / Subtitle	Shift + Picture / Format
Picture / Subtitle	Subtitle / EQ
Red / Program	Red / Netflix / Search

Original	Replacement
Red / Program	TV/Radio /
Green / Intro	Green / APP / Repeat
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP /
Blue / A-B	Blue / Prime Video / Random
Blue / A-B	Shift + Yellow / YouTube /







Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 S.Mode	 Sound / Title
 Audio/Reveal	 Audio / Lang I/II
 Zoom/Subpage	 Subtitle / EQ
 P.Mode	 Picture / Format
 Size	 Zoom / Size
 Sleep	 Sleep / Timer
 D.Menu	 D.Menu / Top
 Text	 Text / Goto

Original	Replacement
 Input	 AV / Input / RDS
 LCD Menu	 Menu / Home
 Up	 Up
 Index	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Recall	 Back / Return
 Vol+	 Vol+
 DVD Setup	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2





Original	Replacement	Original	Replacement
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Auto		Fav / Marker / PC
	Red/Program		Red / Netflix / Search
	Green/Intro		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
Hold	 + 	Shift + Stop /	
Title	 + 	Shift + Sound / Title	
Nicam	 + 	Shift + Audio / Lang I/II	

Original	Replacement	Original	Replacement
Aspect	 + 	Shift + Picture / Format	
D.Subt.	 + 	Shift + Zoom /	
Goto	 + 	Shift + Text /	
Angle	 + 	Shift + Info / Angle	
Slow/PgUp	 + 	Shift + CH+ /	
D.Disp	 + 	Shift + Display / Media	
Step/PgDn	 + 	Shift + CH- /	

