









 



 


Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Back	 Back
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep

Original	Replacement
 NICAM	 Smart
 Menu	 Menu
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Exit	 Exit
 Display	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 List	 List
 Fav List	 Pre Ch
 CH +	 Ch +
 CH -	 Ch -
 TV / Radio	 TV/R





Original	Replacement	Original	Replacement
 CPG	 Media		
 Aspect	 Format		
 Freeze	 Pause		
 Index	 D. Menu		
 Cancel	 Shift + Back		
 Subpage	 Subt		
 Text	 Text		
 Reveal	 Options		
 Size	 3D		
 Hold	 Stop		
 Mix	 Rec		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		

