



| Original | Replacement | Original | Replacement |
|--|---|---|---|
|  Power |  Power |  8 |  8 |
|  Mute |  Mute |  9 |  9 |
|  Audio |  Dual |  0 |  0 |
|  TV / STB |  Shift + TV/R |  PGUP |  Vol + |
|  TV / R |  TV/R |  PGDN |  Vol - |
|  Sleep |  Sleep |  SAT |  Shift + AV |
|  SUB |  Subt |  FAV + |  Ch + |
|  TXT |  Text |  FAV - |  Ch - |
|  P / N |  Shift + 1 |  EPG |  Guide |
|  Recall |  Pre Ch |  Fav |  Shift + Pre Ch |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  Right |  Right |
|  3 |  3 |  Down |  Down |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  OK |  Ok |
|  6 |  6 |  Menu |  Menu |
|  7 |  7 |  Exit |  Exit |





| Original | | Replacement | | Original | | Replacement | |
|---|----------|---|-----------|---|--------------|---|---------------|
|  | Red |  | Red |  | << |  | << |
|  | Green |  | Green |  | >> |  | >> |
|  | Yellow |  | Yellow |  | Play / Pause |  | Play |
|  | Blue |  | Blue |  | > < |  | Shift + Pause |
|  | Pause |  | Pause |  | << |  | << |
|  | Zoom |  | Eject |  | >> |  | >> |
|  | Edit |  | Format | | | | |
|  | Info |  | Info | | | | |
|  | USB |  | AV | | | | |
|  | MP3 |  | Media | | | | |
|  | JPEG |  | Smart | | | | |
|  | PVR List |  | List | | | | |
|  | A - B |  | Back | | | | |
|  | T.S. |  | Shift + 2 | | | | |
|  | Goto |  | Options | | | | |
|  | Stop |  | Stop | | | | |
|  | Rec |  | Rec | | | | |

