



 


 

 

 



 














 



 

 

 



 





 









Original	Replacement
 Tv	 TV/Radio /
 Power	 Power
 World	 Smart / List
 [≡]/Text	 Text / Goto
 Sleep	 Sleep / Timer
 Music/Movie/Phot	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source/Games	 AV / Input / RDS
 0	 0

Original	Replacement
 Recall	 Shift + Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 i	 Info / Angle
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





Original		Replacement		Original		Replacement	
	Back		Back / Return				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	[≡]..		Setup / OPT /				
	Lang		Audio / Lang I/II				
	O/*		Zoom / Size				
	Q../*		Picture / Format				
	Play		Play / Slow				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	Guide		Guide / EPG / -/--				
	[-O-]		Display / Media				

