



Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute	 Menu	 Menu
 FAV	 Pre Ch	 Exit	 Exit
 Subtitle	 Subt	 EPG	 Guide
 Info	 Info	 Goto	 Shift + Guide
 TTX	 Text	 Up	 Up
 Recall	 Back	 Down	 Down
 List	 List	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Pg Up	 Shift + Up
 6	 6	 PG Dn	 Shift + Down
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 >>	 >>





Original	Replacement	Original	Replacement
 <<	 <<		
 >>	 >>		
 <<	 <<		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec	 Rec		
 Lang	 Dual		
 Timeshift	 Smart		
 Tv/Radio	 TV/R		
 Repeat	 Shift + Text		
 Red / Zoom	 Red		
 Green / Aspect	 Green		
 Yellow / V-Format	 Yellow		
 Blue / Timer	 Blue		

