




 
 
 
 
 

 
 
 
 


 
 

 
 



 

 
 
 






 
 



 
 
 
 

 
 
 


 






| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Menu |  Menu |
|  Exit |  Exit |
|  Last |  Pre Ch |
|  Tv/R |  TV/R |
|  Up |  Up |

| Original | Replacement |
|---|--|
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  OK |  Ok |
|  CH + |  Ch + |
|  Ch - |  Ch - |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Sub-T. |  Subt |
|  Info |  Info |
|  Text |  Text |
|  Audio |  Dual |
|  USB |  AV |
|  Timer |  Shift + AV |
|  Favor |  Shift + Pre Ch |
|  Red/Left |  Red |
|  Green/Right |  Green |



