



Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 V-	 Vol-
 World/Internet	 Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Music/Camera	 Display / Media
 TV Guide	 Guide / EPG / -/-
 */O	 Shift + 1
 */Q	 Shift + 2





	Original	Replacement	Original	Replacement
	[≡]/Text	 GOTO TEXT Text / Goto		
	Red	 NETFLIX SEARCH Red / Netflix / Search		
	Green	 APP REPEAT Green / APP / Repeat		
	Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
	Blue	 Prime Video RANDOM Blue / Prime Video / Random		
	Lang	 LANG I/II AUDIO Audio / Lang I/II		
	[≡]..	 TITLE SOUND Sound / Title		
	[-O-]	 OPT-TOOLS SETUP Setup / OPT /		
	<<	 TUNE- TUNE- << / Tune-		
	Pause	 STEP-FREEZE STEP-FREEZE Pause / Step / Freeze		
	>>	 TUNE+ TUNE+ >> / Tune+		
	Rec	 REC MODE REC MODE Rec / Rec Mode		
	Play	 SLOW SLOW Play / Slow		
	Stop	 HOLD HOLD Stop / Hold		

